
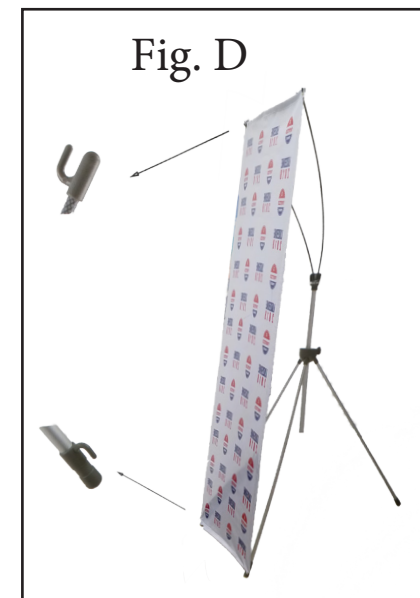
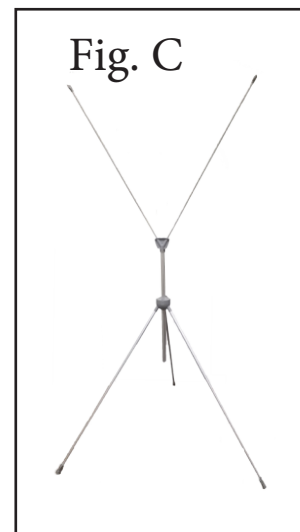
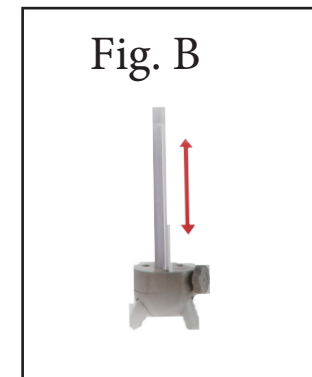
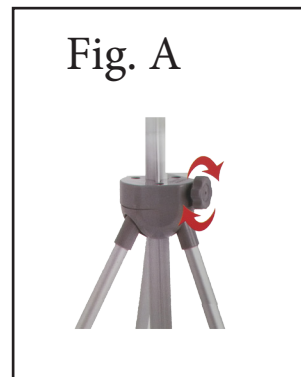


SELFIE STAND Assembly Instructions

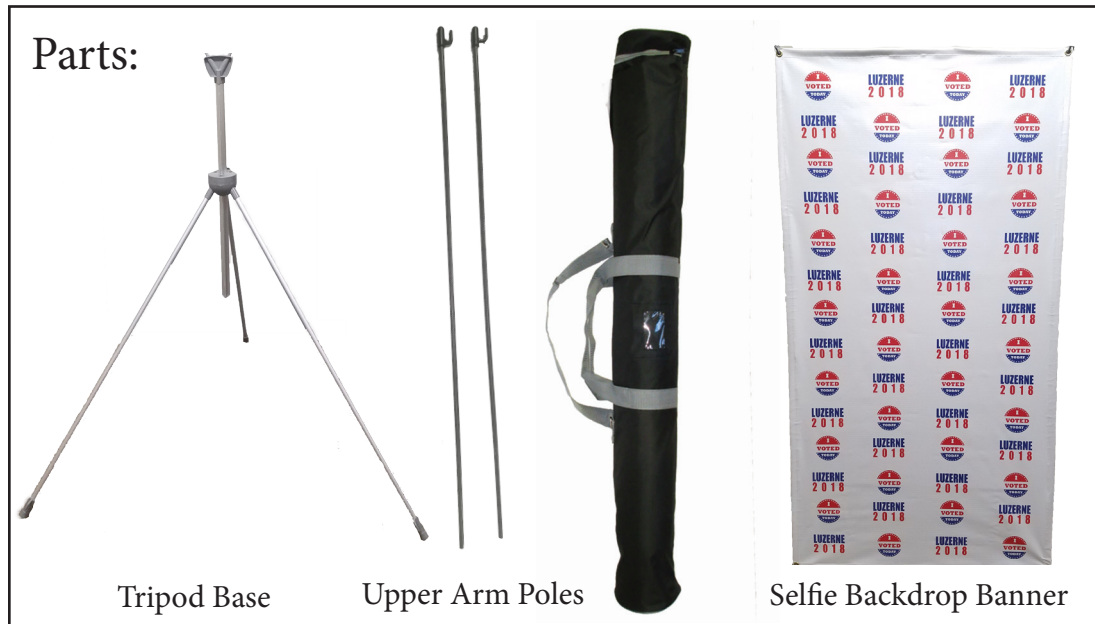

Please read instructions fully before using this product.

1. Pull all parts out of bag in the area where stand will be displayed.
2. Hold the tripod base upright with the legs facing down. Pull the three legs outward until they snap into place.
3. Center pole should be at the lowest setting. (Center knob can be loosened to slide pole up or down by twisting knob counterclockwise. See Figures A and B.)
4. Insert the upper arms into into the holes at the top of the tripod base. Spin the hooks to face the front. (Figure C)
5. Attach grommets on the banner to the top hooks. (Figure D)
6. Loosen center pole and slide up until banner will attach loosely to the bottom hooks, and tighten center knob by turning clockwise.
7. Attach bottom grommets on the banner to the bottom hooks.
8. Loosen knob and raise the height of the center pole until banner is taut. Then tighten center knob.

A. RIFKIN Co.
Established 1892

Customer Service:
800-458-7300
Visit our website at
www.arifkin.com

Stock CatID: AFSELF-100-VB46

*For custom banner units, refer to your Order for CatID or call customer service.